

## GROUP 51

## EXTERIOR

### GENERAL

#### OUTLINE OF CHANGES

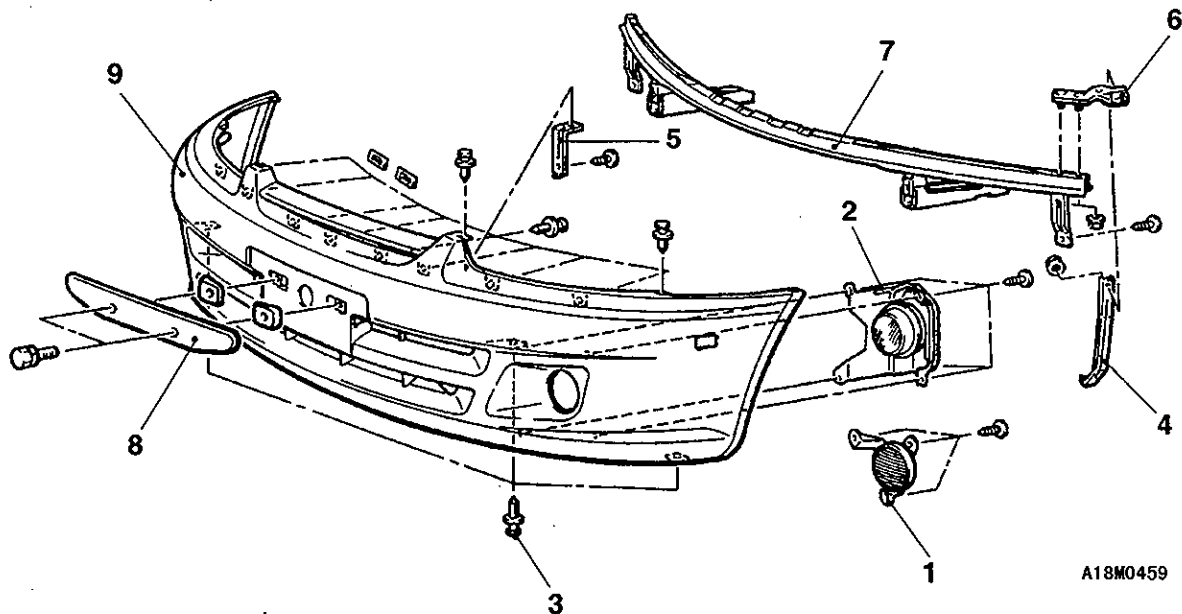
Following items have been changed. The service procedures for these items have been now established.

- Front bumper
- Fog lamp
- Aero parts

### FRONT BUMPER

#### DISASSEMBLY AND REASSEMBLY

<Hatchback>



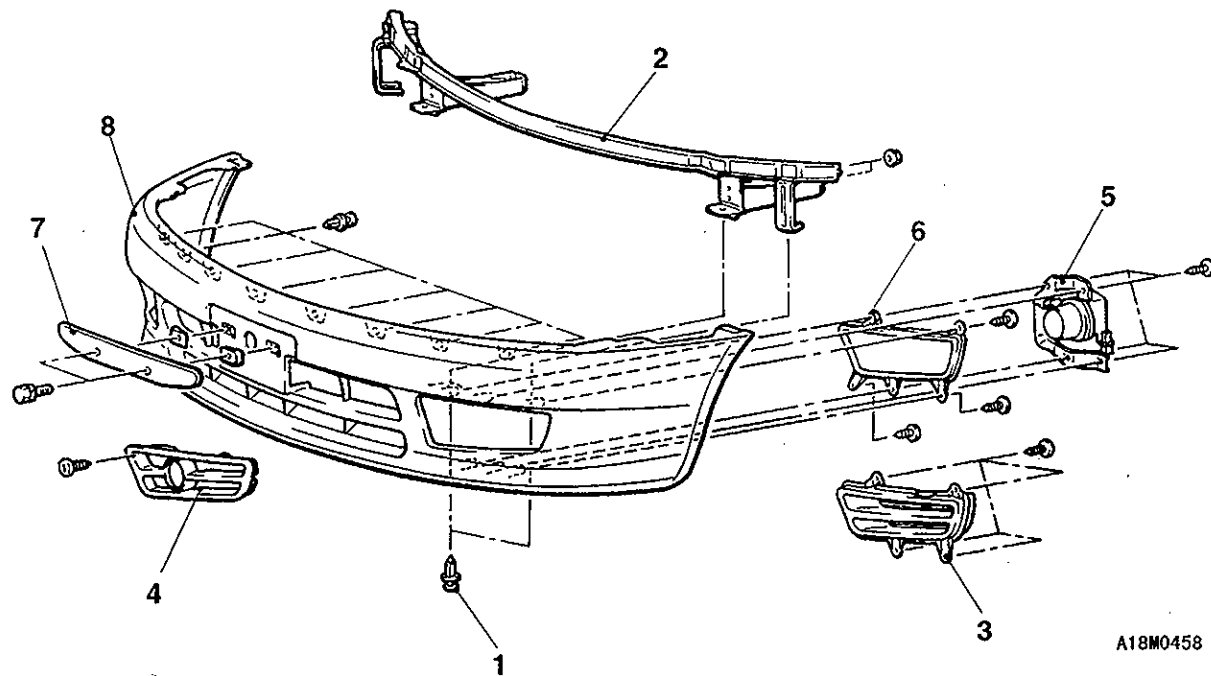
#### Disassembly steps

1. Air intake bezel  
<Vehicles without fog lamp>
2. Front fog lamp assembly  
<Vehicles with fog lamp>
3. Clip
4. Side rear plate

5. Center upper plate
6. Side upper plate
7. Front bumper reinforcement
8. Licence plate bracket
9. Bumper face

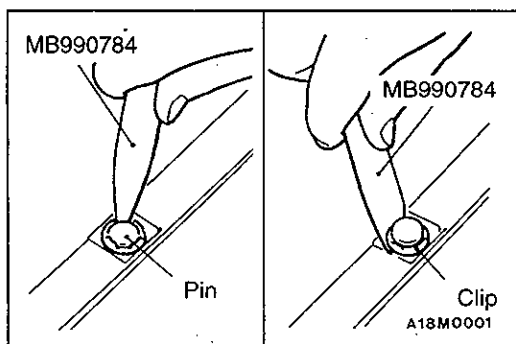
◀A▶

&lt;Sedan&gt;

**Disassembly steps**

1. Clip
2. Front bumper reinforcement
3. Air intake bezel  
<Vehicles without fog lamp>
4. Front fog lamp bezel  
<Vehicles with fog lamp>

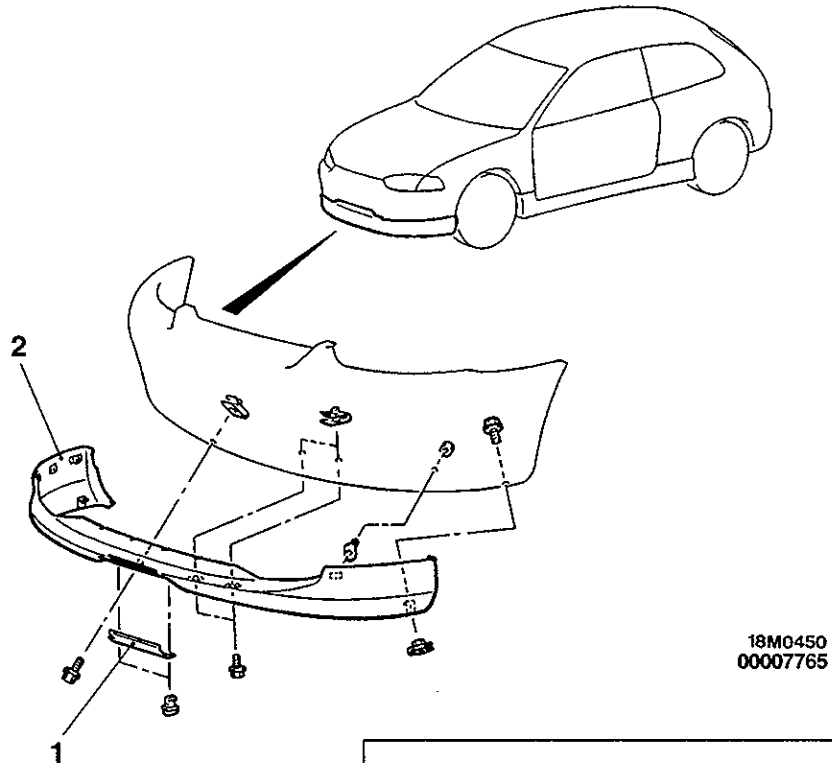
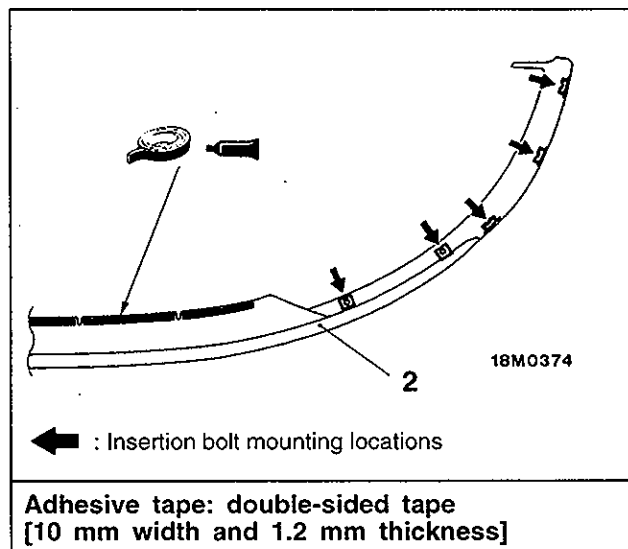
5. Front fog lamp assembly  
<Vehicles with fog lamp>
6. Front fog lamp bezel plate  
<Vehicles with fog lamp>
7. Licence plate bracket
8. Bumper face

**DISASSEMBLY SERVICE POINT****◀A▶ CLIP REMOVAL**

- (1) Use the special tool to pull up the centre pin in the clip.
- (2) Remove the clip.

**AERO PARTS****REMOVAL AND INSTALLATION**

&lt;Hatchback&gt;

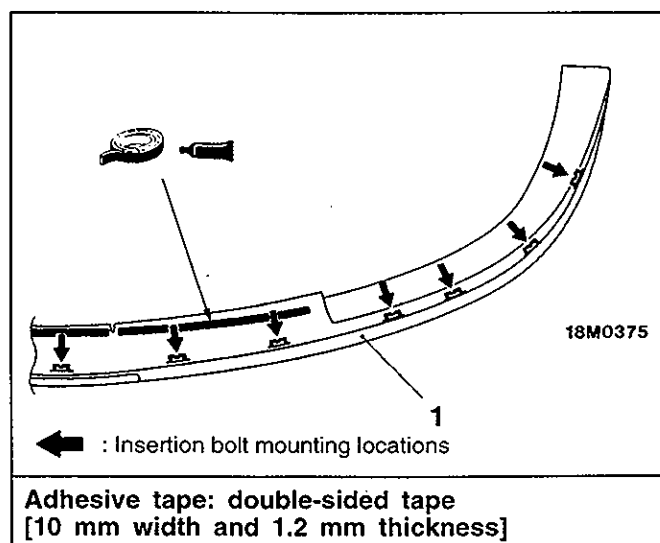
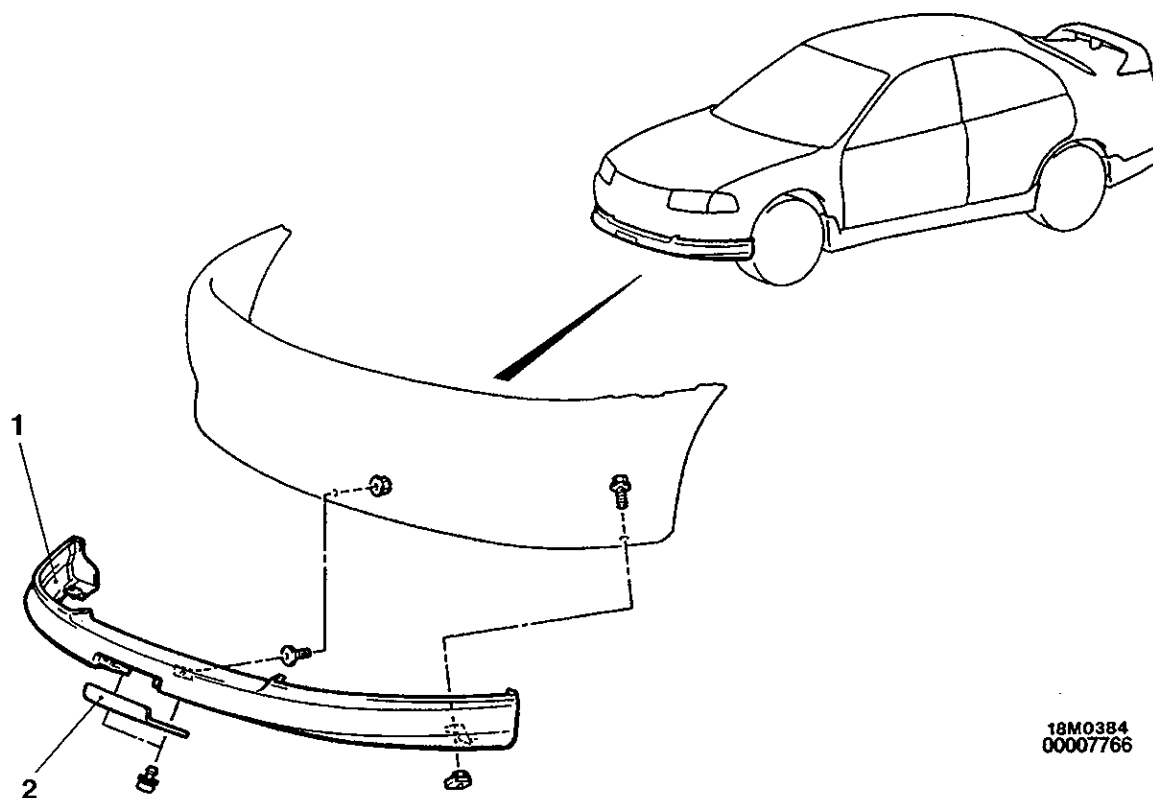
18M0450  
00007765**Front airdam panel removal steps**

1. Center cover
2. Front airdam panel

**NOTE**

For each service point, refer to Basic Manual.

&lt;Sedan&gt;



## Front airdam panel removal steps



1. Front airdam panel
2. Center cover

## NOTE

For each service point, refer to Basic Manual.