

## GROUP 54

# CHASSIS ELECTRICAL


### HEADLAMP AND FRONT TURN-SIGNAL LAMP <HATCHBACK>

#### GENERAL

#### OUTLINE OF CHANGE

The following maintenance service points have been established to correspond to changes in the shape of the headlamps and front turn signal lamps.


#### REMOVAL AND INSTALLATION

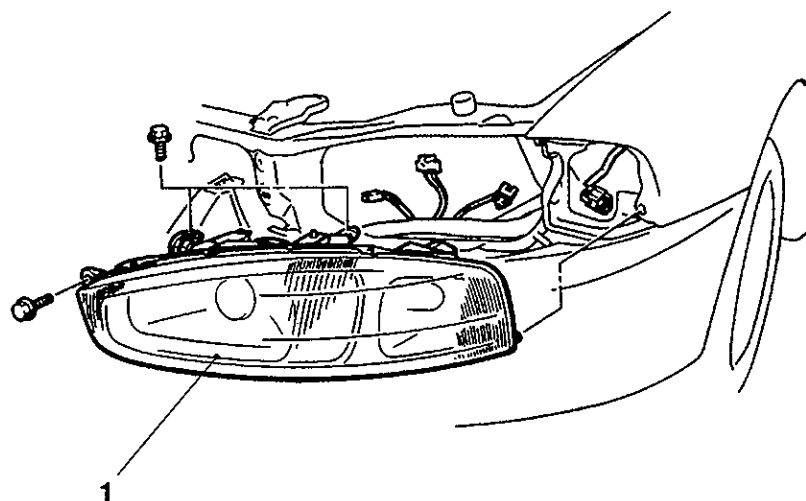

A16M0448



1. Headlamp

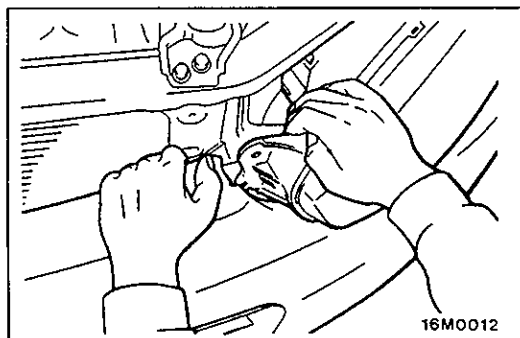

16M0012

#### REMOVAL SERVICE POINT

##### ◀A▶ HEADLAMP REMOVAL

After removing the inside of the headlamp while pulling the bumper towards you as shown in the illustration, remove the outside, and then remove the headlamp.

## FRONT FOG LAMP


### GENERAL

### OUTLINE OF CHANGE

The following maintenance service points have been established to correspond to changes in the shape of the fog lamps.


### REMOVAL AND INSTALLATION

<Hatchback>

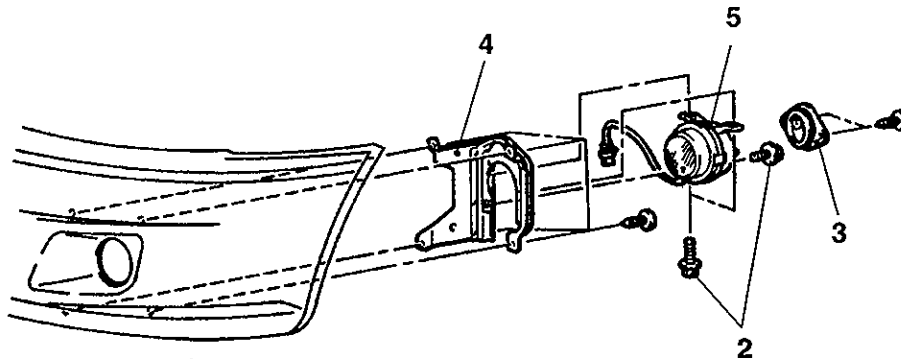

<Sedan>

18M0449

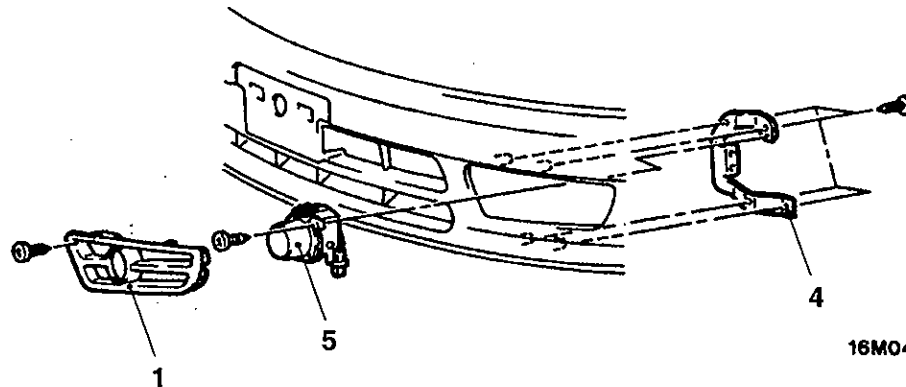

16M0450

00007771

#### Fog lamp unit removal steps

1. Fog lamp bezel
2. Fog lamp unit mounting bolt  
<Hatchback>
3. Cap
4. Fog lamp unit

#### Fog lamp bracket removal steps

- Front bumper (Refer to GROUP 51.)
- 2. Fog lamp unit mounting bolt  
<Hatchback>
- 4. Fog lamp bracket
- 5. Fog lamp unit

**REMOVAL SERVICE POINT <HATCHBACK>****◀A▶ FOG LAMP UNIT MOUNTING BOLT/CAP/FOG  
LAMP UNIT REMOVAL**

Remove the fog lamp unit mounting bolt and the fog lamp unit cap. Then pull the fog lamp unit out through the gap at the front bumper.