

GROUP 55

HEATER, AIR CONDITIONER AND VENTILATION

GENERAL


OUTLINE OF CHANGE

The following maintenance service points have been established to correspond to changes in the compressor.

COMPRESSOR AND TENSION PULLEY

MAGNETIC CLUTCH

DISASSEMBLY AND REASSEMBLY

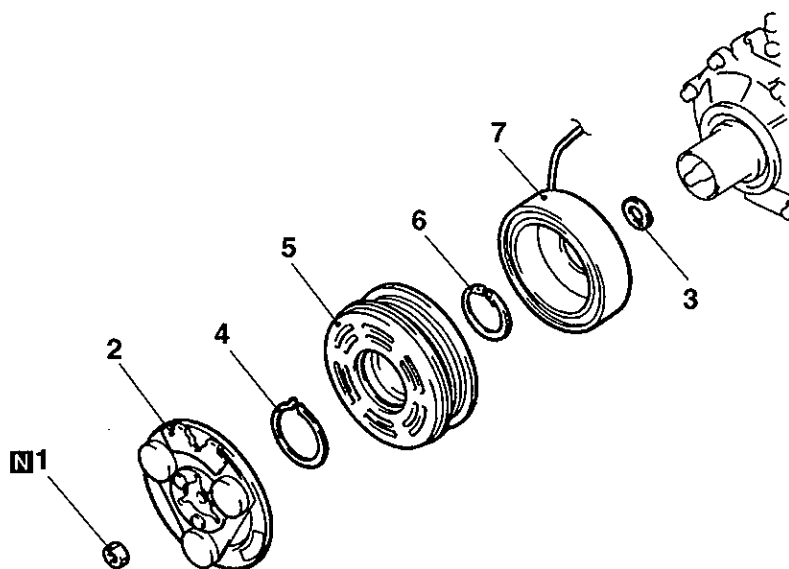

A20M0100

Disassembly steps

- ◀A▶ ● Air gap adjustment
- ▶E▶ 1. Nut
- ▶D▶ 2. Armature plate
- ▶C▶ 3. Shims
- ▶B▶ 4. Snap ring
- 5. Rotor

- ▶A▶ 6. Snap ring
- 7. Clutch coil

NOTE

For each service point, refer to Basic Manual.

NOTES