

MITSUBISHI

COLT

WORKSHOP MANUAL SUPPLEMENT

FOREWORD

This manual outlines changes in servicing procedures related to the chassis including vehicle inspections, adjustments and improvements in the newly equipped models.

Please read this manual carefully so that it will be of assistance for your service activities.

Please note that the following service manuals are also available and should be used in conjunction with this manual.

TECHNICAL INFORMATION MANUAL

PYME9501

PYME9501-1

WORKSHOP MANUAL

CHASSIS GROUP PWME9511 (Basic)

PWME9511-A (Supplement)

PWME9511-B (Supplement)

ENGINE GROUP PWEE

(Looseleaf edition)

ELECTRICAL WIRING PHME9511 (Basic)

PHME9511-A (Supplement)

PHME9511-B (Supplement)

PHME9511-C (Supplement)

BODY REPAIR MANUAL PBME9501 (Basic)

PBME9501-1 (Supplement)

PBME9501-2 (Supplement)

PARTS CATALOGUE B806F006A_

General	00
Engine	11
Engine Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control	17
Automatic Transmission	23

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.

WARNING!

- (1) Improper service or maintenance of any component of the SRS and any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag or to the driver and passenger (from rendering the SRS inoperative).
- (2) SRS components should not be subjected to heat, so remove the SRS-ECU, air bag module (driver's side and front passenger's side), clock spring, side impact sensor and front seat assembly (side air bag module) before drying or baking the vehicle after painting.
SRS-ECU, air bag module, clock spring and side impact sensor: 93°C or more
- (3) Service or maintenance of any SRS component and SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B - Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS and any SRS-related component.

NOTE

Section titles with asterisks (*) in the table of contents in each group indicate operations requiring warnings.