GROUP 70

SINGLE PART INSTALLATION POSITION

CONTENTS

ECU 70-2

SOLENOID AND SOLENOID VALVE 70-4

INSPECTION CONNECTOR AND SPARE CONNECTOR 70-6

FUSIBLE LINK AND FUSE 70-7

SENSOR 70-8

RELAY 70-12


EARTH CABLE. 70-13

EARTH 70-14

ECU

M3020000500403

Name		Symbol	Name	Symbol
A/C-ECU		H	Front-ECU	C
ABS-ECU	LHD	A	Headlamp assembly (incorporating ECU)	E
	RHD	B		
Column switch (incorporating Column-ECU)		F	Immobilizer-ECU	G
Engine-ECU		L	Power window main switch (incorporating ECU)	N
ETACS-ECU		I	Power window sub switch (incorporating ECU)	M
Fan controller		D	SRS-ECU	J
			4WD-ECU	K

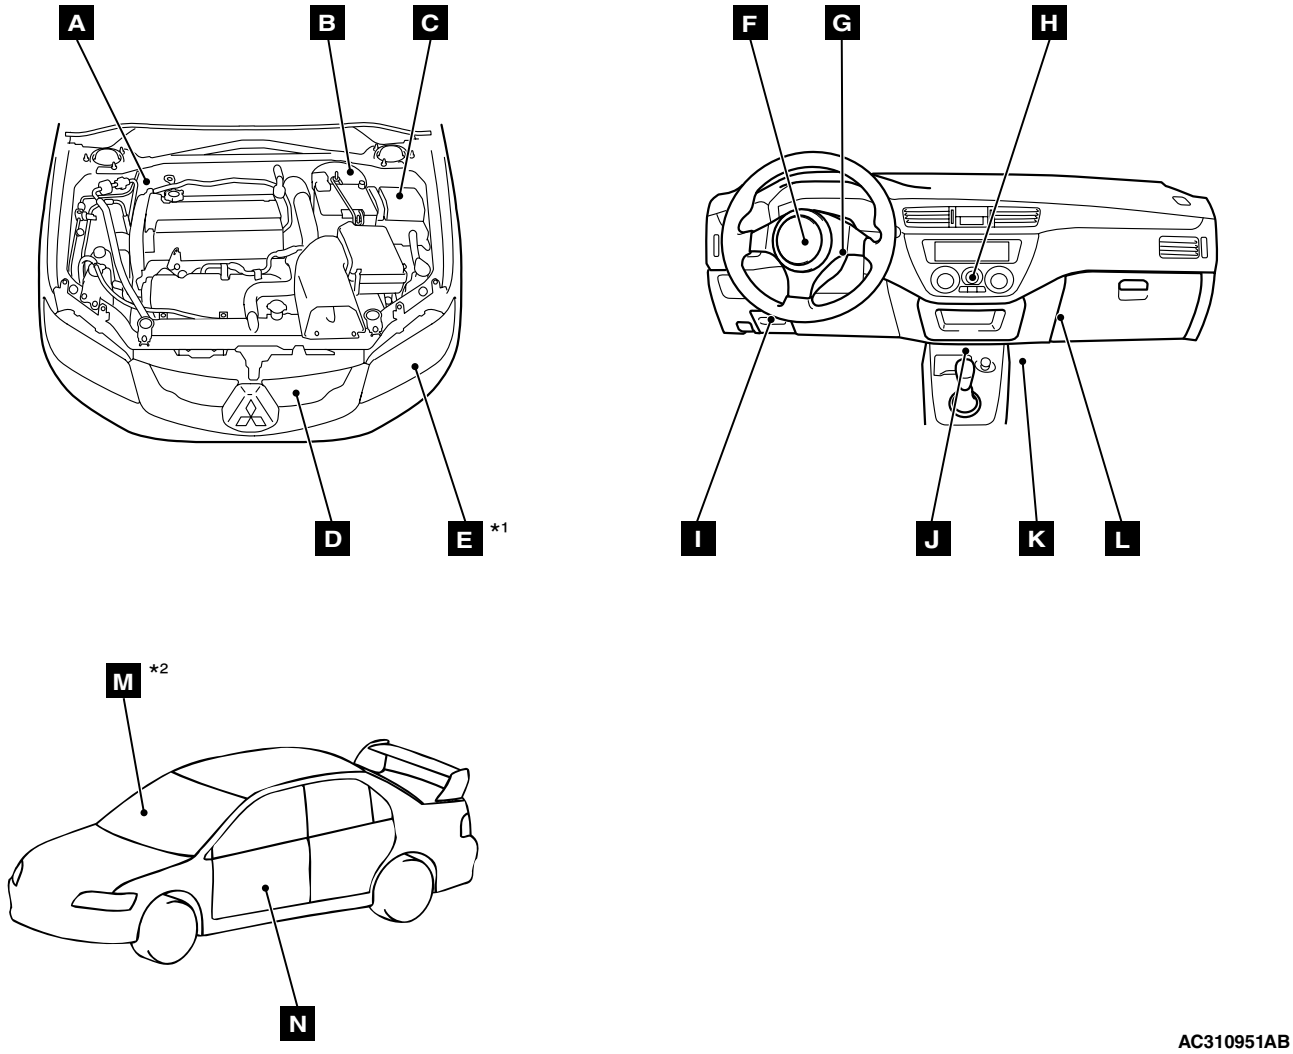


AC310951AB


NOTE:

1. **1: also equipped at the right side.*
2. **2: also equipped at the rear doors.*


A <LHD>

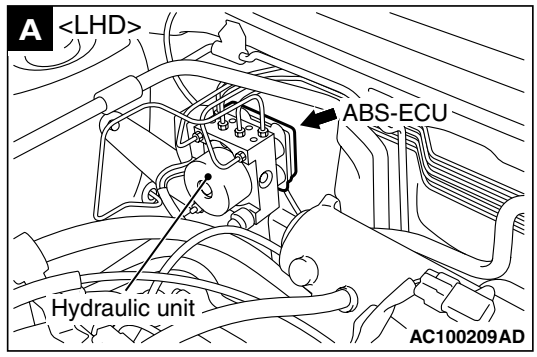


B <RHD>

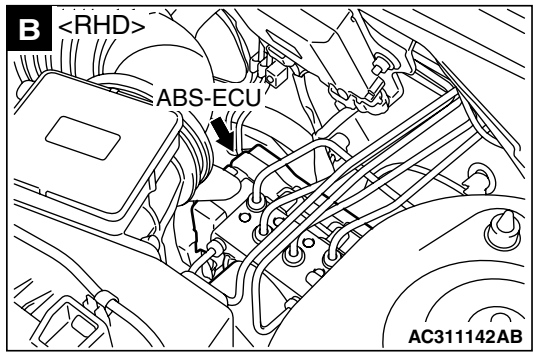


C

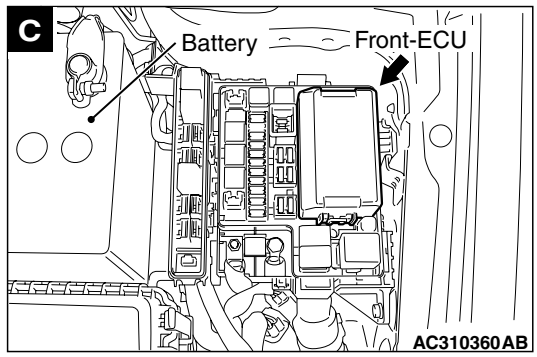


D

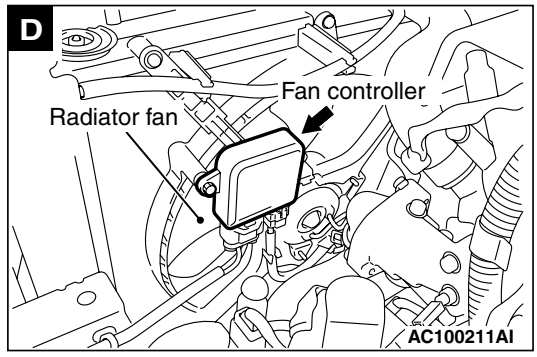


E

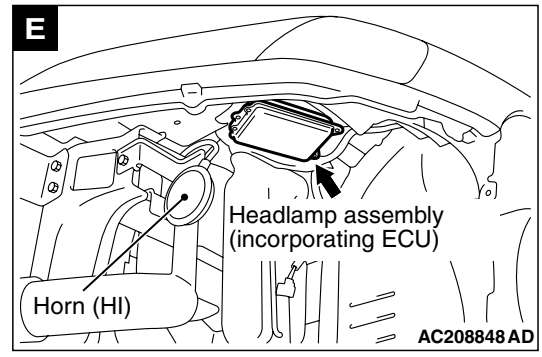


F

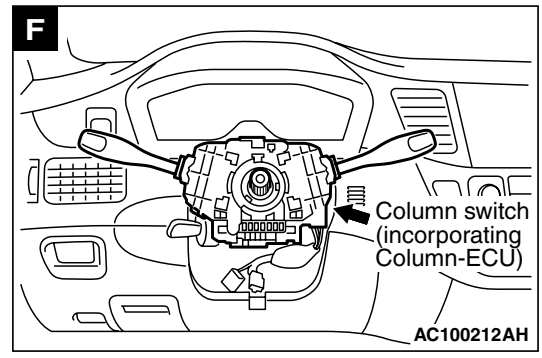



G

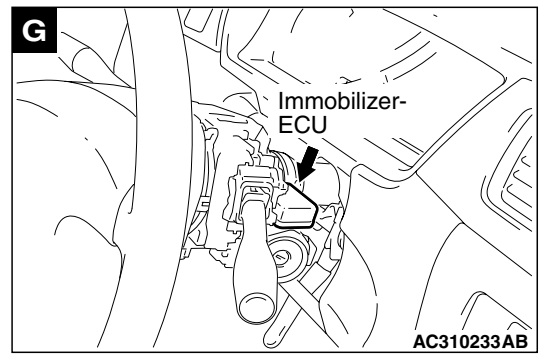



H

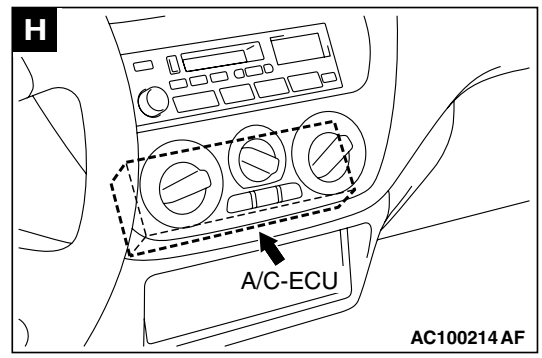


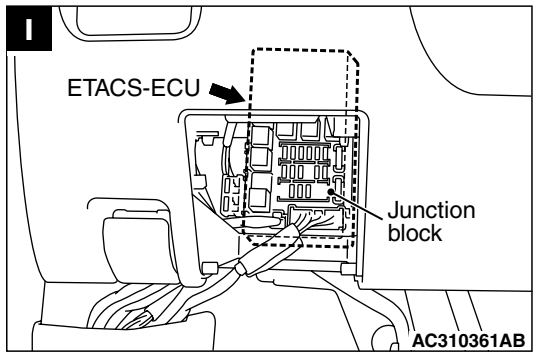


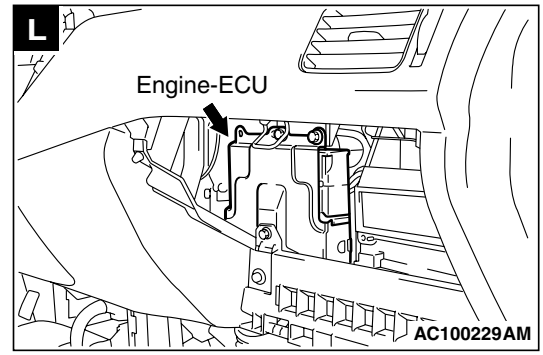

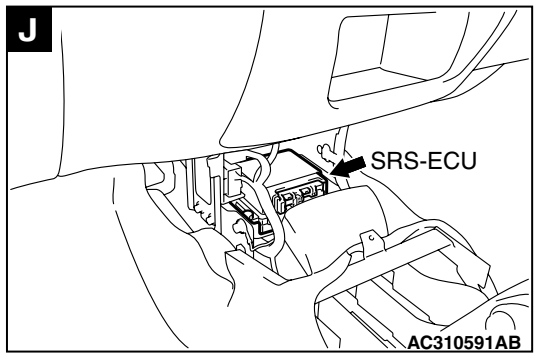

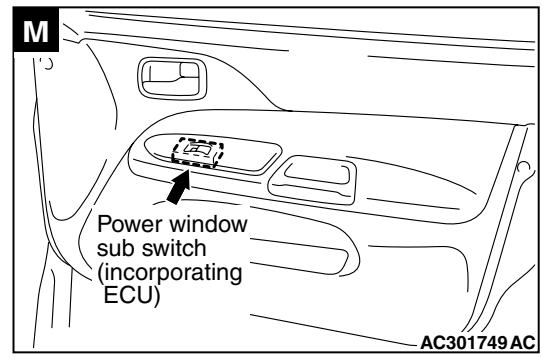

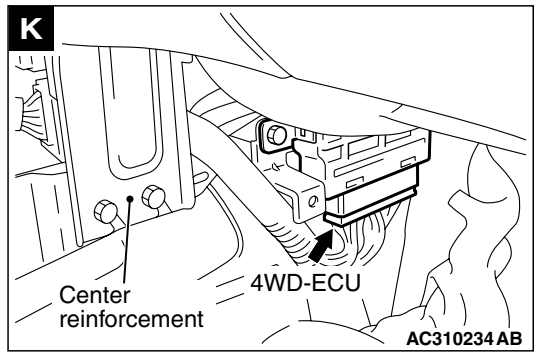


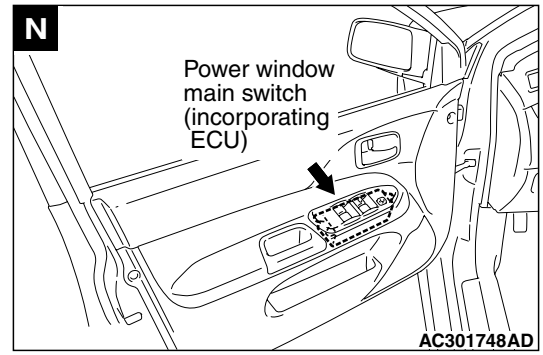


SOLENOID AND SOLENOID VALVE

M3020000800330


Name	Symbol	Name		Symbol
EGR control solenoid valve	C	Hydraulic unit <for ABS (incorporating solenoid valve)>	LHD	A
Fuel pressure control solenoid valve	B		RHD	D
Hydraulic unit assembly <for ACD and AYC (incorporating solenoid valve)>	F	Purge control solenoid valve		B
		Wastegate solenoid valve		E

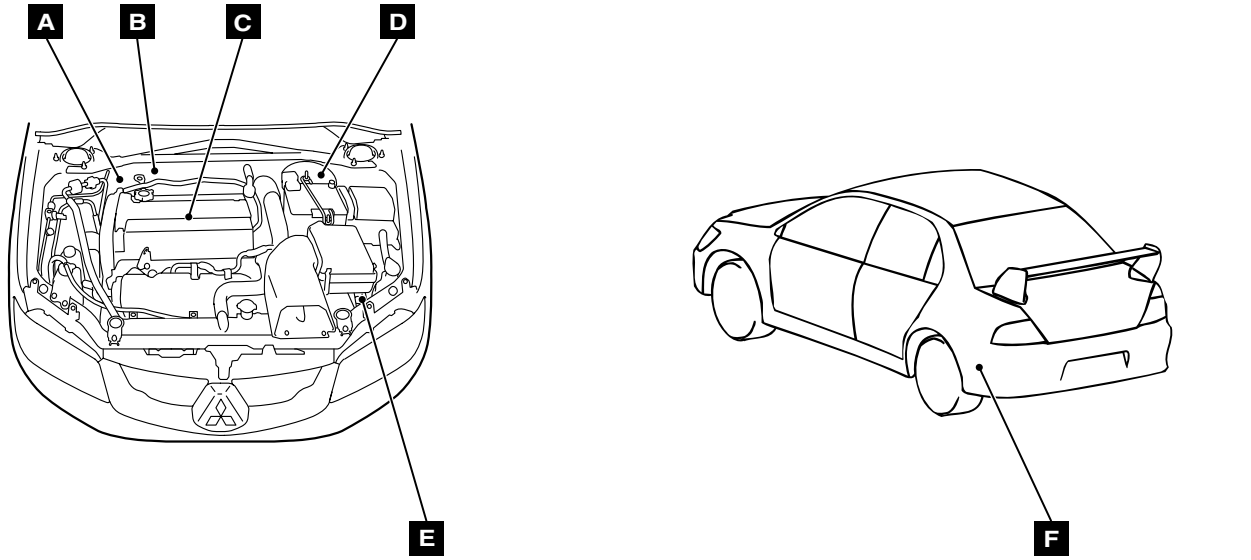


AC310235AB

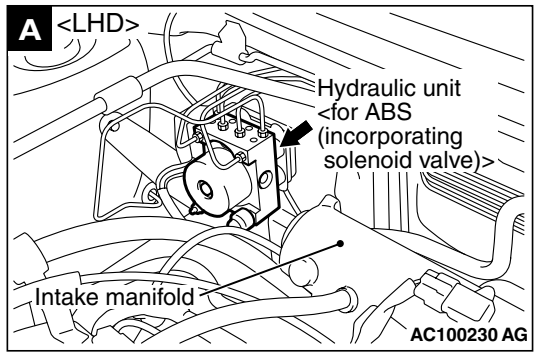


AC100230AG

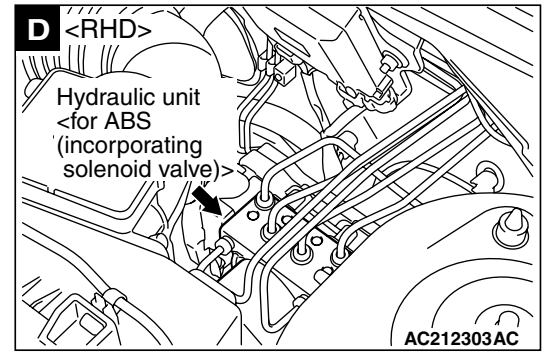


AC212303AC

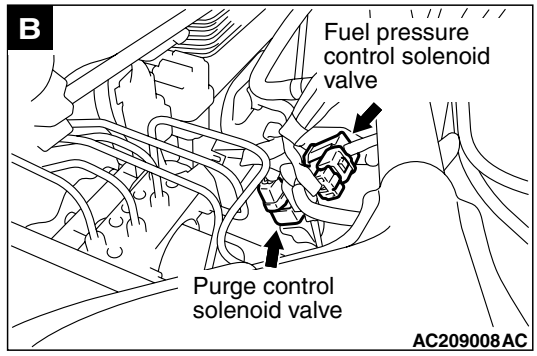


AC209008AC

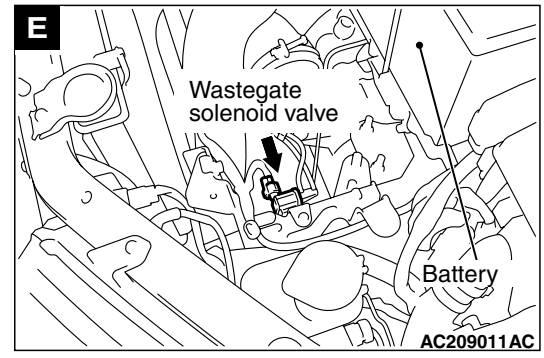

AC209011AC

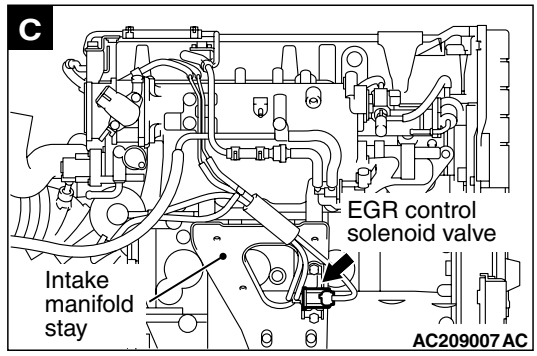

AC209007AC

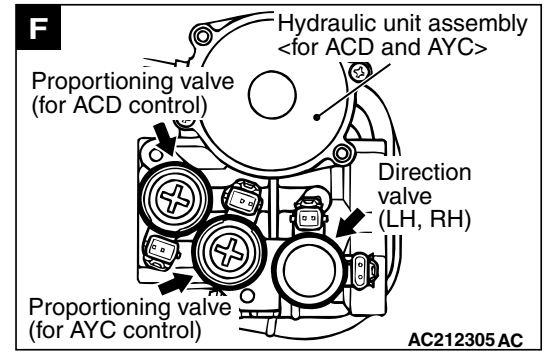


AC212305AC


INSPECTION CONNECTOR AND SPARE CONNECTOR

M3020000200372


Name	Symbol	Name	Symbol
Diagnosis connector	B	Spare connector (for audio)	C
Engine speed detection connector	A		

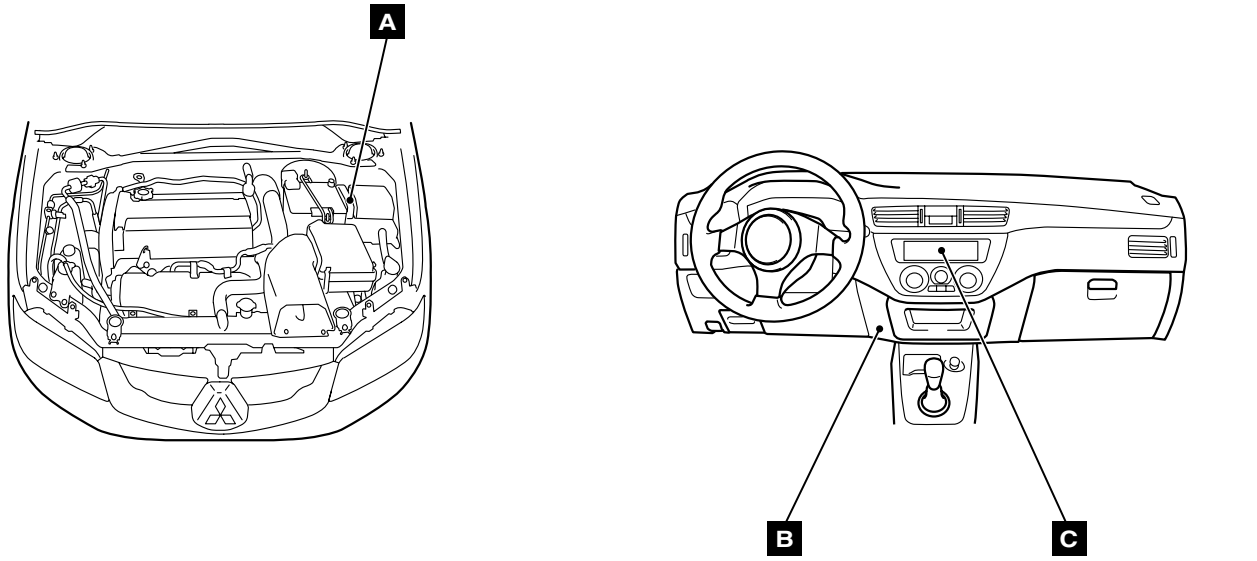


AC310952AB

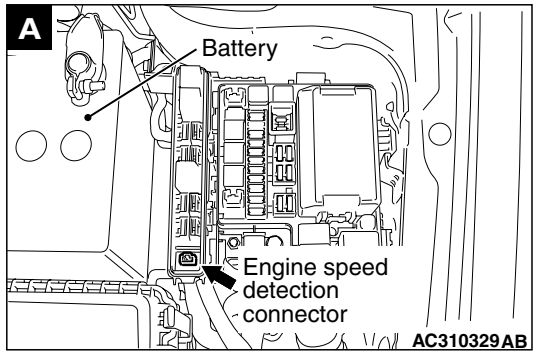

AC310329AB

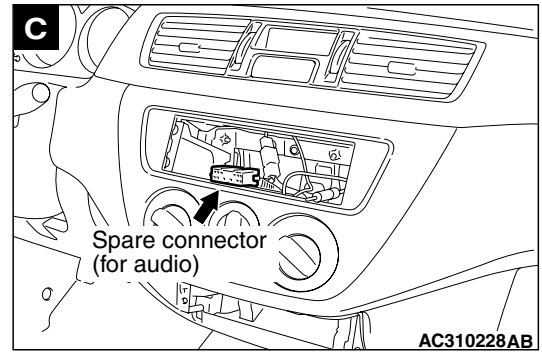

AC310228AB

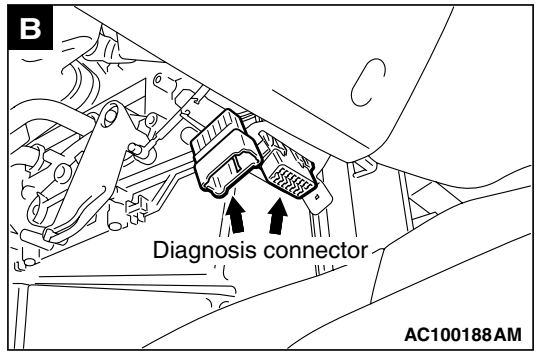


AC100188AM


FUSIBLE LINK AND FUSE


M3020000100290


Name	Symbol	Name	Symbol
Fuses No.1 to 23 (Passenger compartment)	C	Fusible links No.1 to 5 (Engine compartment)	B
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.26, 27 (Battery positive terminal)	A

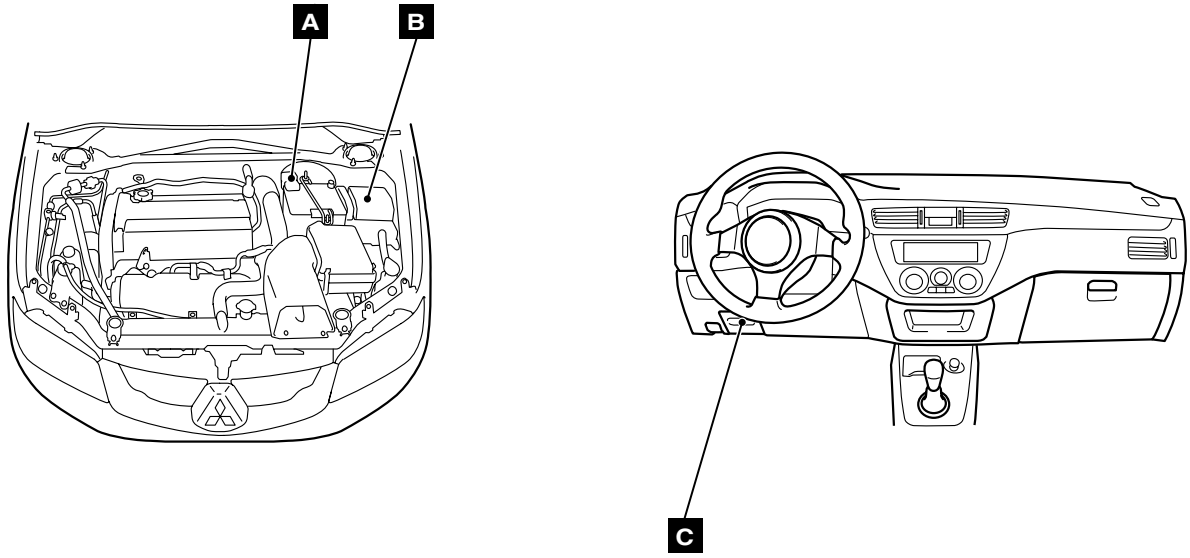


AC310952AC

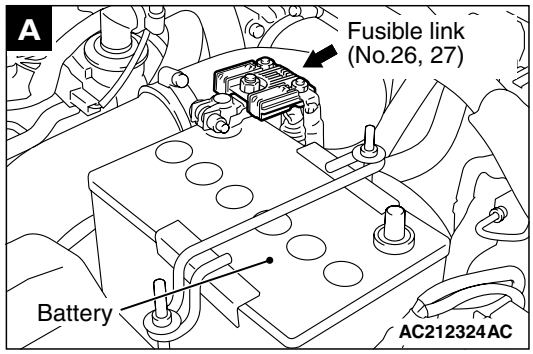

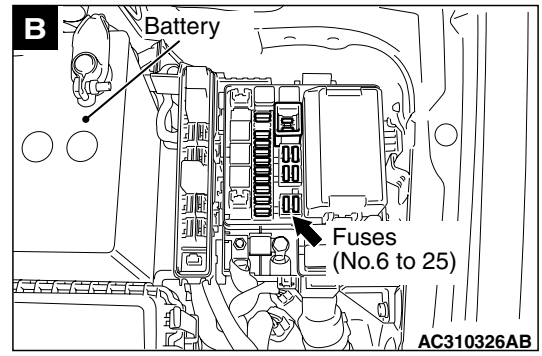

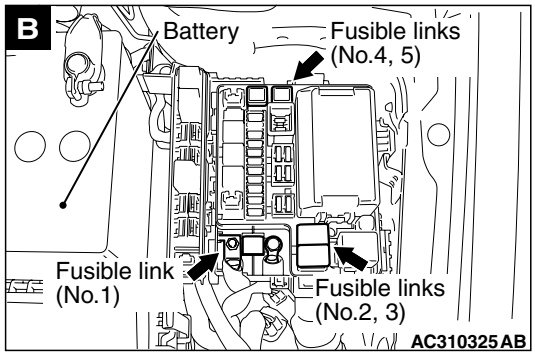


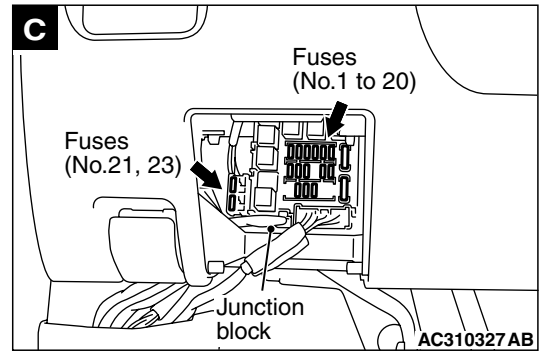

SENSOR

M3020000600422


Name	Symbol	Name	Symbol
Air flow sensor	H	G-sensor (lateral)	K
Air thermo sensor	L	G-sensor (longitudinal)	K
Camshaft position sensor	G	Oxygen sensor (front)	F
Crank angle sensor	A	Oxygen sensor (rear)	N
Detonation sensor	C	Pressure sensor	Q
Engine coolant temperature sensor	G	Steering wheel sensor	J
Engine oil level sensor	B	Throttle position sensor	D
Front impact sensor	I	Vehicle speed sensor	E
Fuel gauge unit (sub)	O	Wheel speed sensor (front)	M
Fuel pump and gauge unit (main)	O	Wheel speed sensor (rear)	P

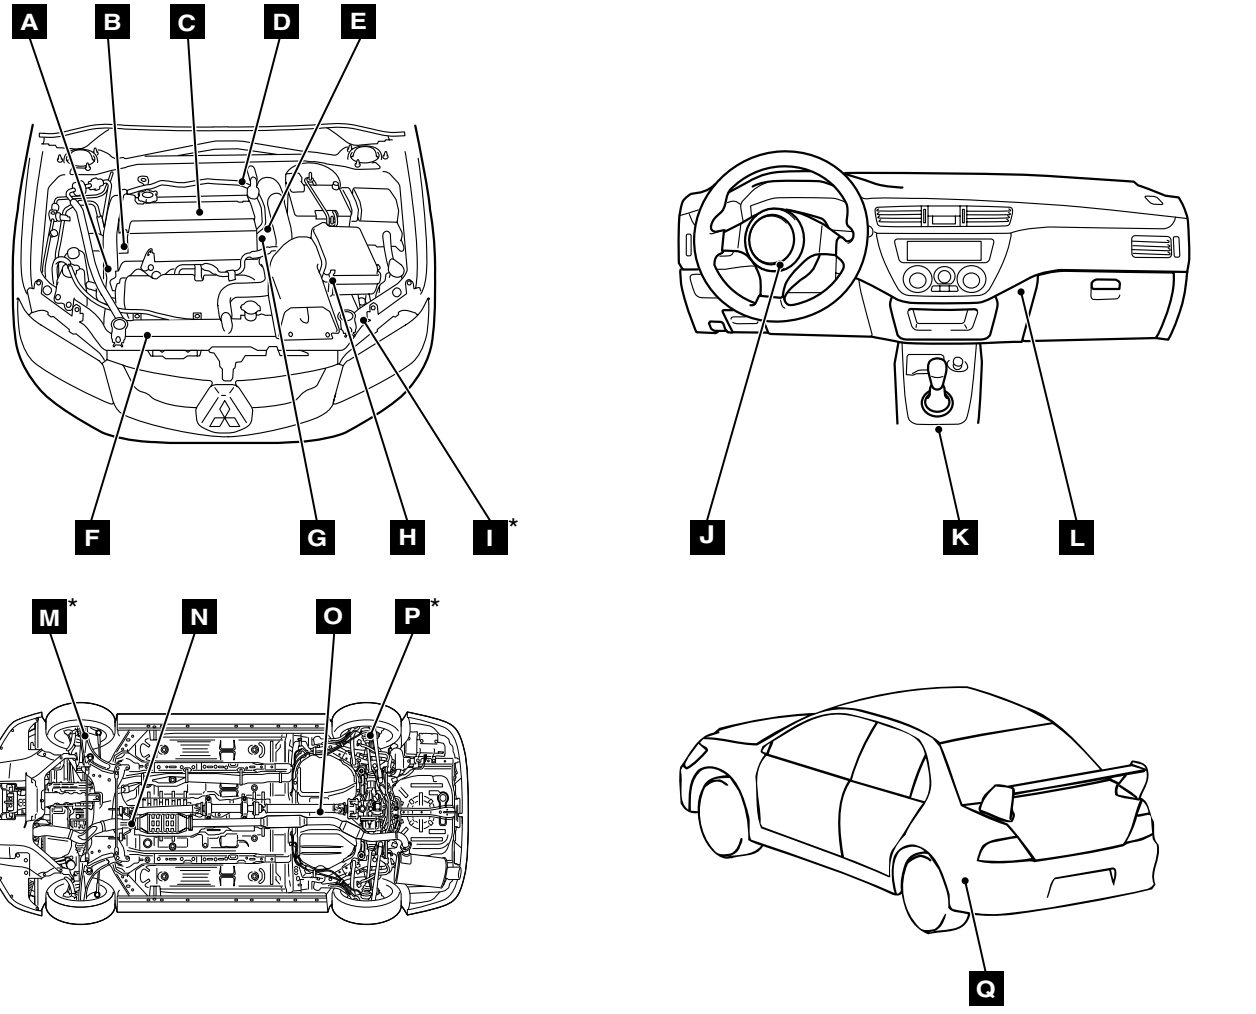


AC310229 AB

*NOTE: The * symbols indicate also equipped at the right side.*


A

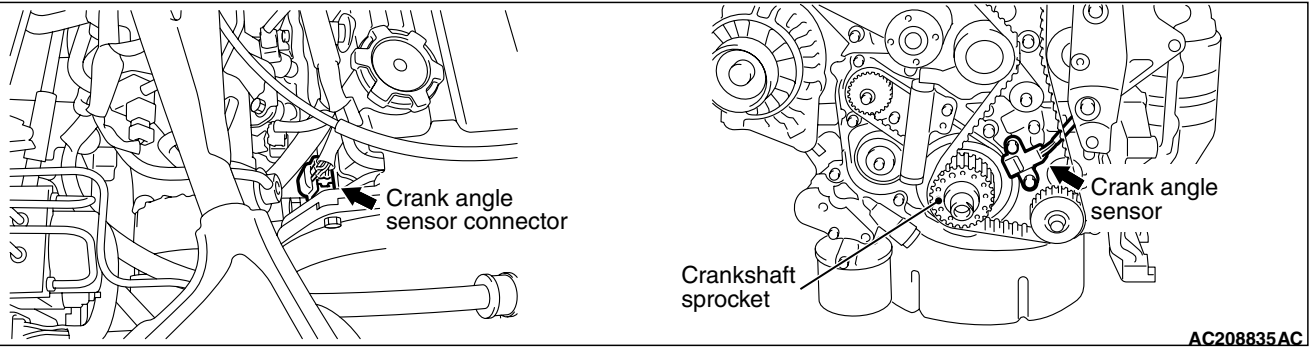
Crank angle
sensor connector
Crank angle
sensor
Crankshaft
sprocket
AC208835AC


B

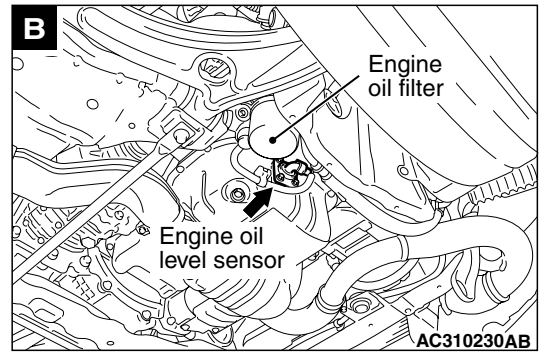
Engine
oil filter
Engine oil
level sensor
AC310230AB


C

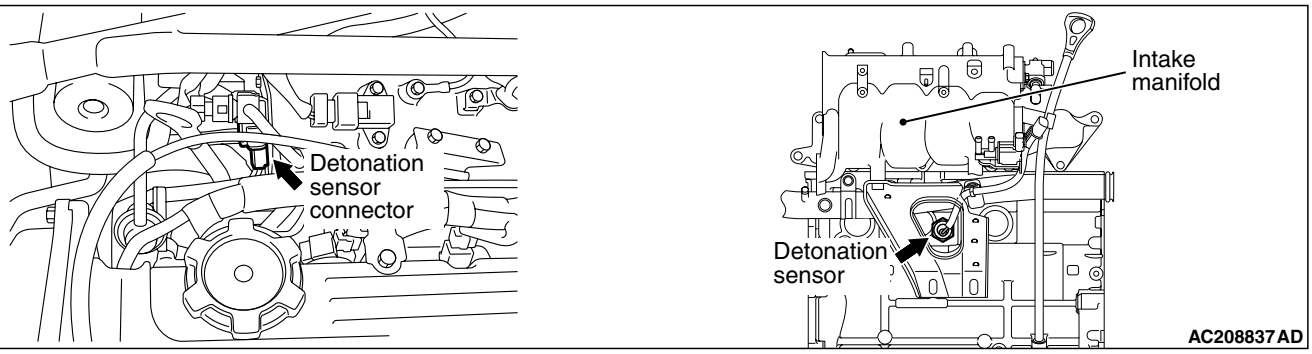
Detonation
sensor
connector
Intake
manifold
Detonation
sensor
AC208837AD


D

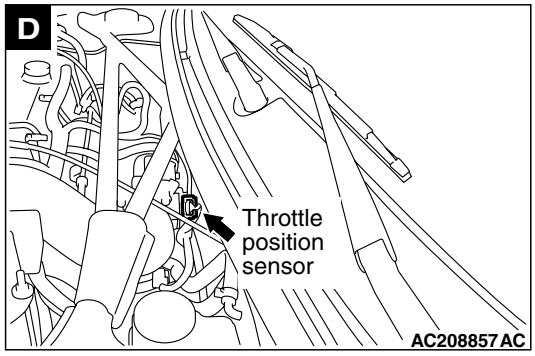
Throttle
position
sensor
AC208857AC


E

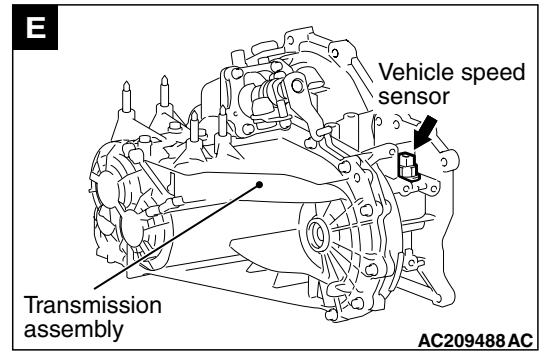
Vehicle speed
sensor
Transmission
assembly
AC209488AC


F

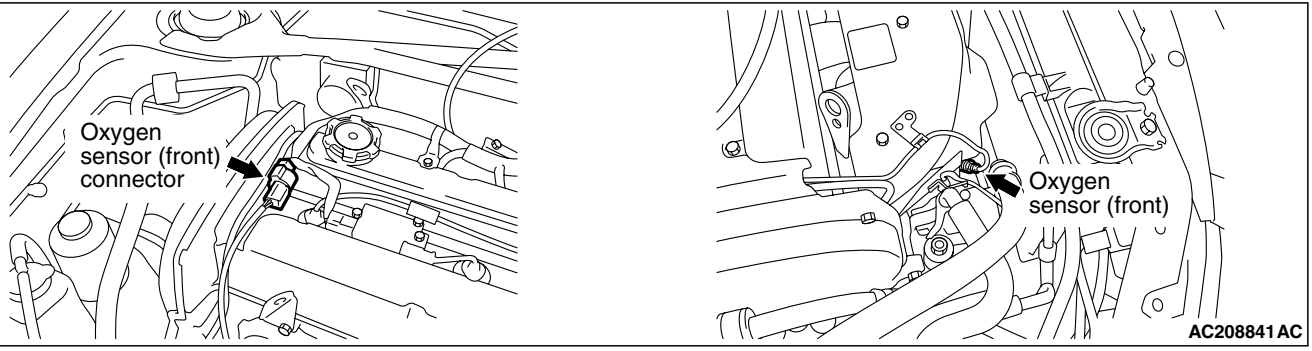
Oxygen
sensor (front)
connector
Oxygen
sensor (front)
AC208841AC


G

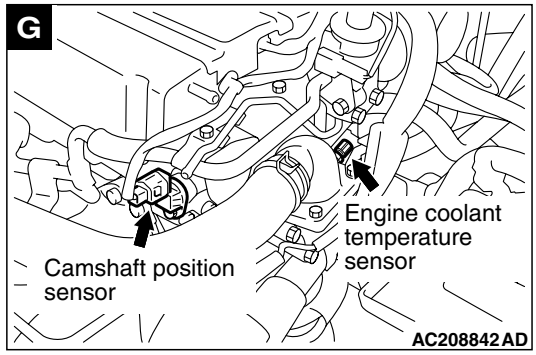
Engine coolant temperature sensor
Camshaft position sensor
AC208842AD


J

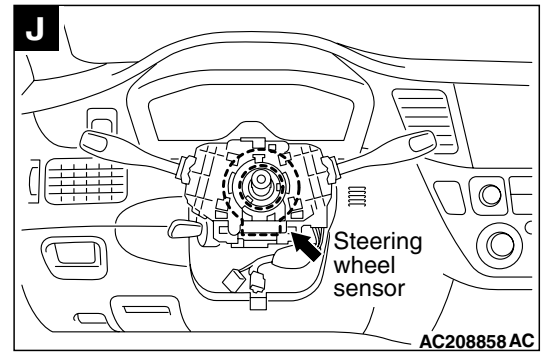
Steering wheel sensor
AC208858AC


H

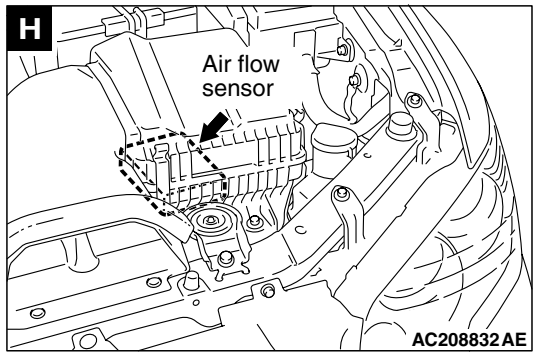
Air flow sensor
AC208832AE


K

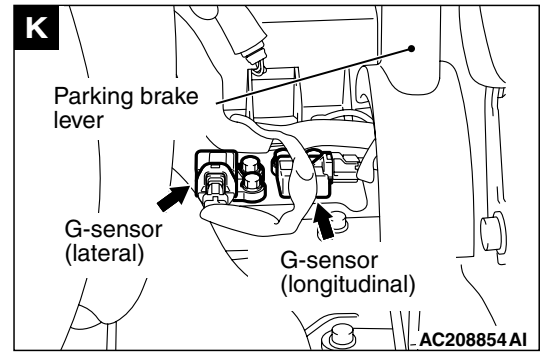
Parking brake lever
G-sensor (lateral)
G-sensor (longitudinal)
AC208854AI


I

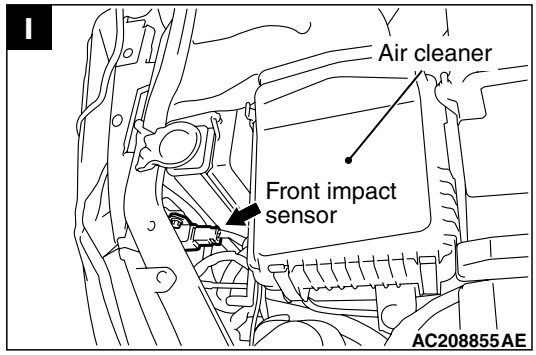
Air cleaner
Front impact sensor
AC208855AE


L

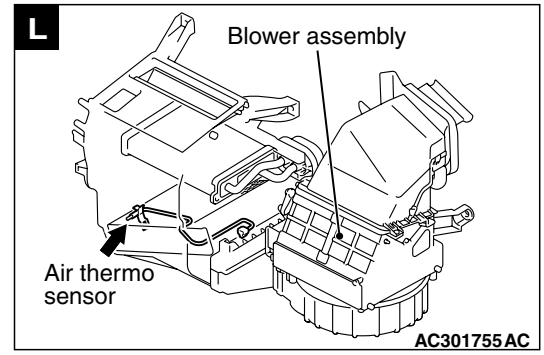
Blower assembly
Air thermo sensor
AC301755AC


M

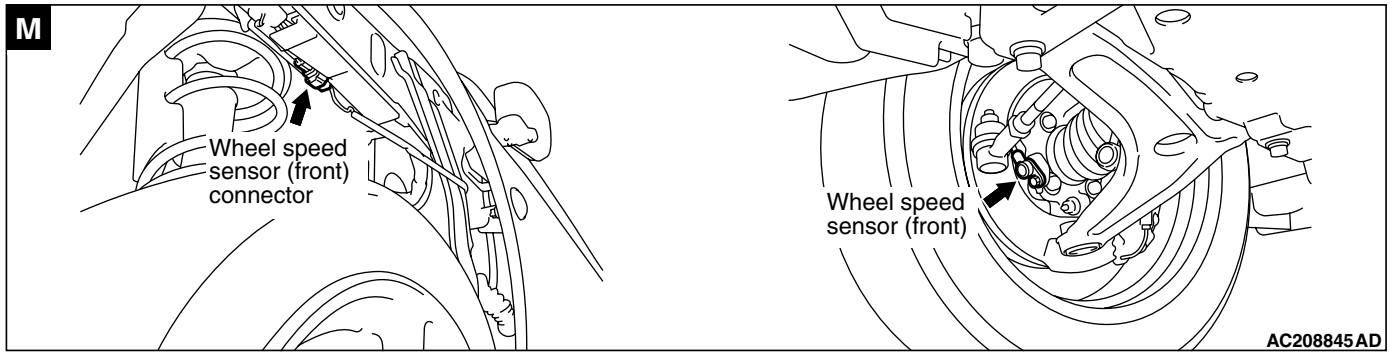
Wheel speed sensor (front) connector
Wheel speed sensor (front)
AC208845AD


N

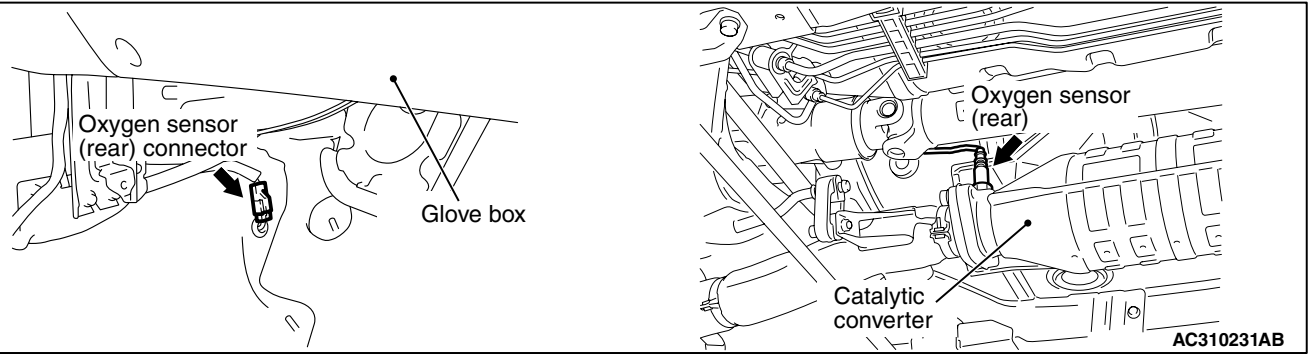
Oxygen sensor (rear) connector
Glove box
Oxygen sensor (rear)
Catalytic converter
AC310231AB


O

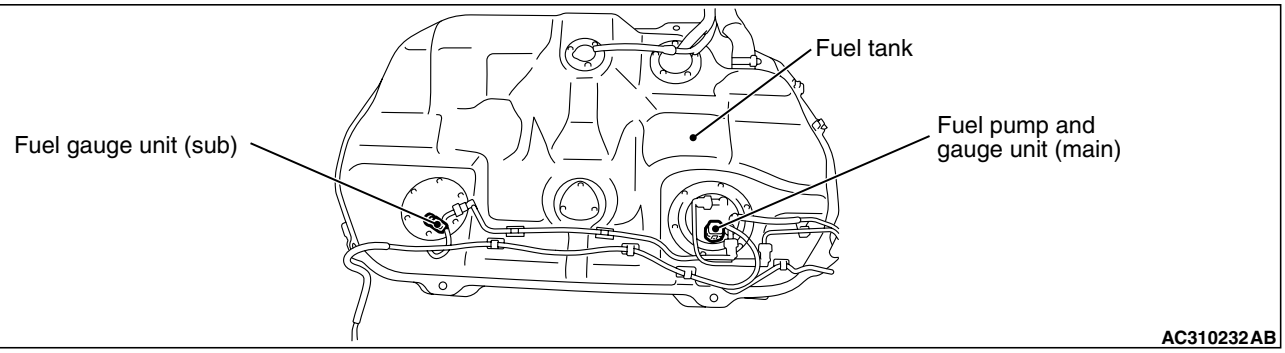
Fuel tank
Fuel gauge unit (sub)
Fuel pump and gauge unit (main)
AC310232AB

P

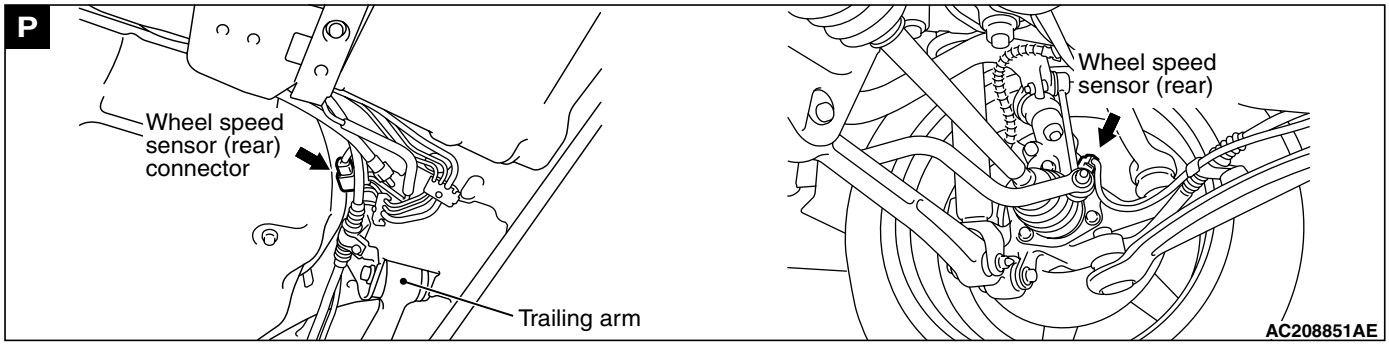
Wheel speed sensor (rear) connector
Trailing arm
Wheel speed sensor (rear)
AC208851AE


Q

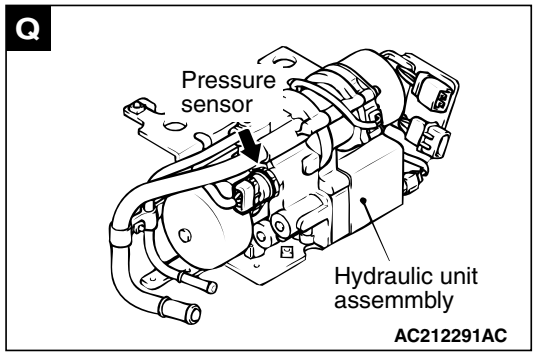
Pressure sensor
Hydraulic unit assemmbly
AC212291AC


RELAY


M3020000400398


Name		Symbol	Name		Symbol
A/C compressor relay		C	Fan control relay		C
Blower relay		D	Fuel pump relay (1)		D
Condenser fan relay (HI)		C	Fuel pump relay (2)		D
Condenser fan relay (LO)		C	Fuel pump relay (3)	LHD	A
Defogger relay		D		RHD	B
Electric pump relay	LHD	A	Horn relay		C
	RHD	B	Ignition coil relay <RHD>		C
Engine control relay		C	Intercooler water spray relay		D
Engine oil revel relay		E	Power window relay		D

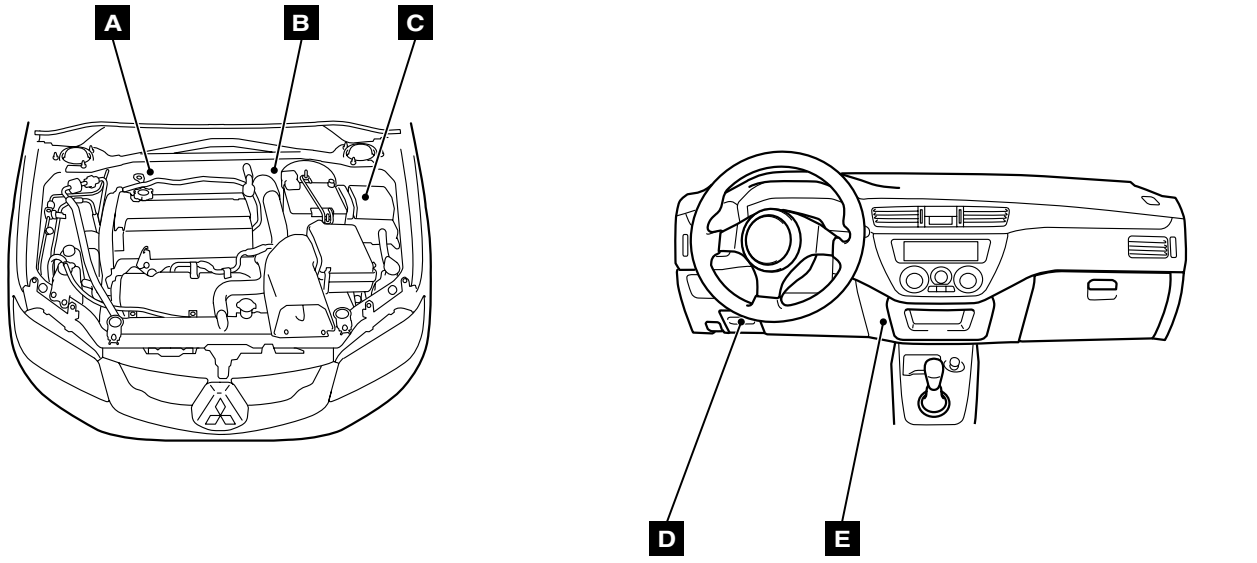



AC310952 AD

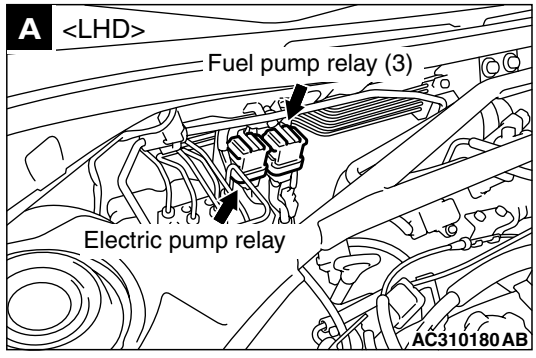

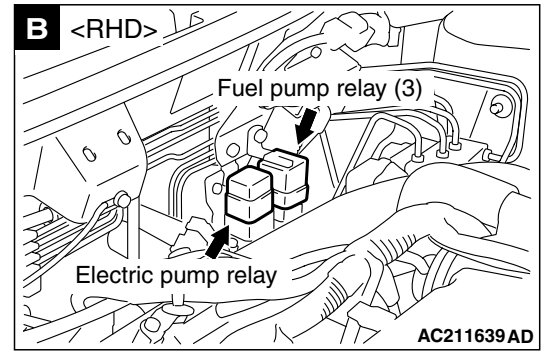

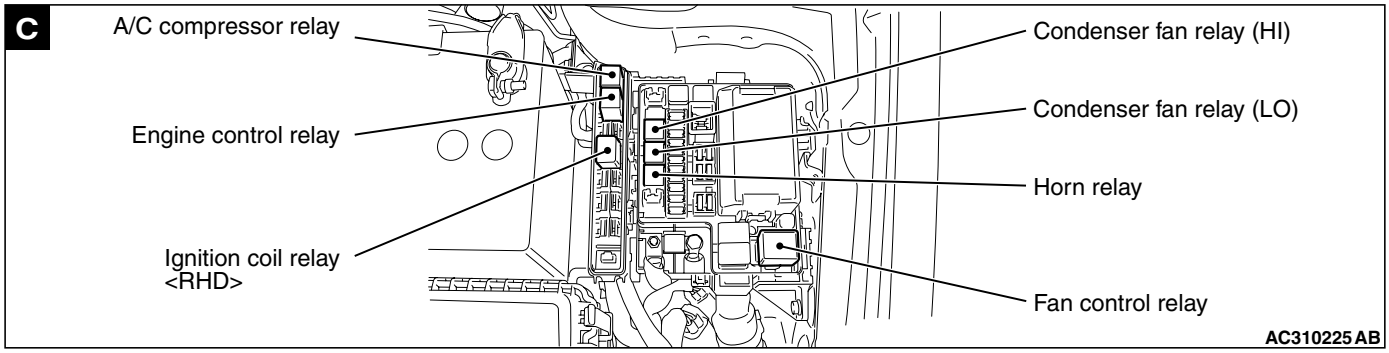


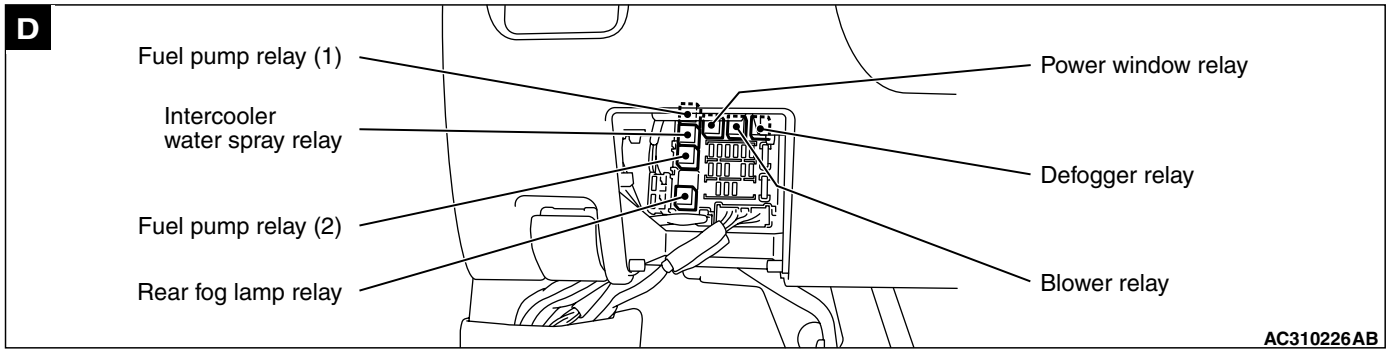

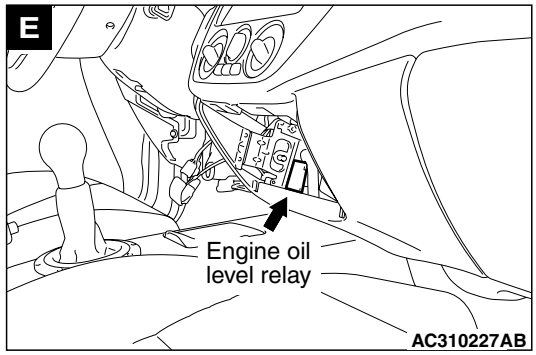

EARTH CABLE


M3020001000326

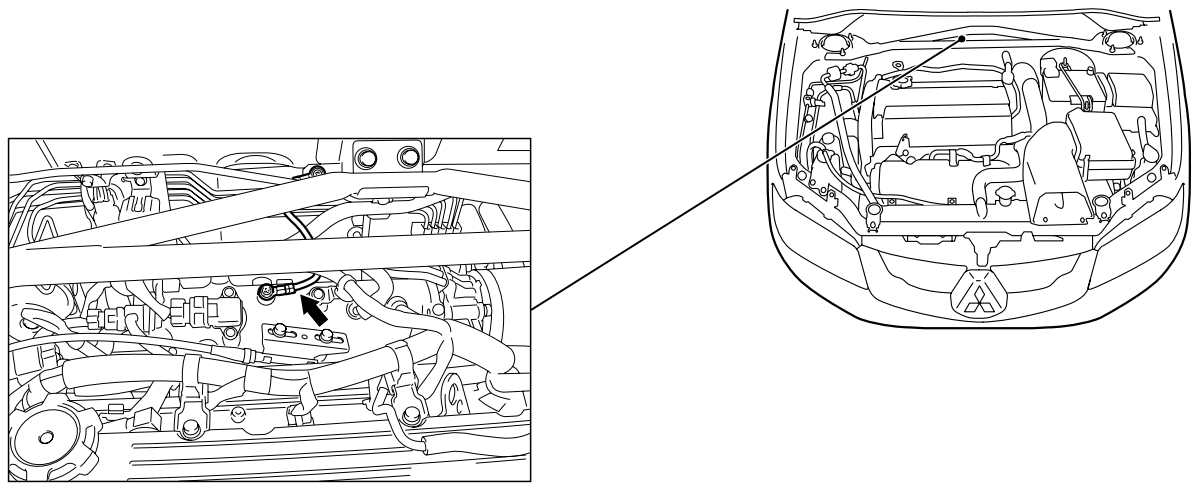

EARTH


M3020000300324

<L.H.drive vehicles>

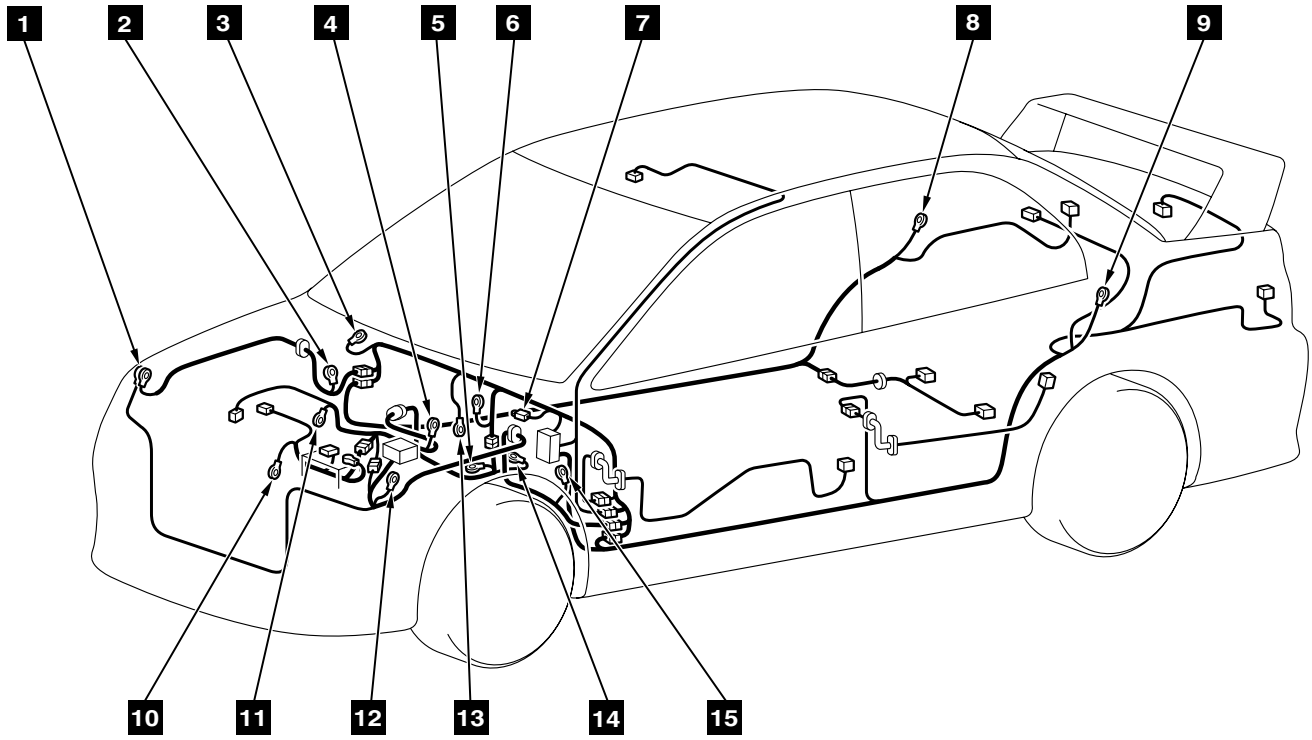

AC310178AB


<R.H.drive vehicles>

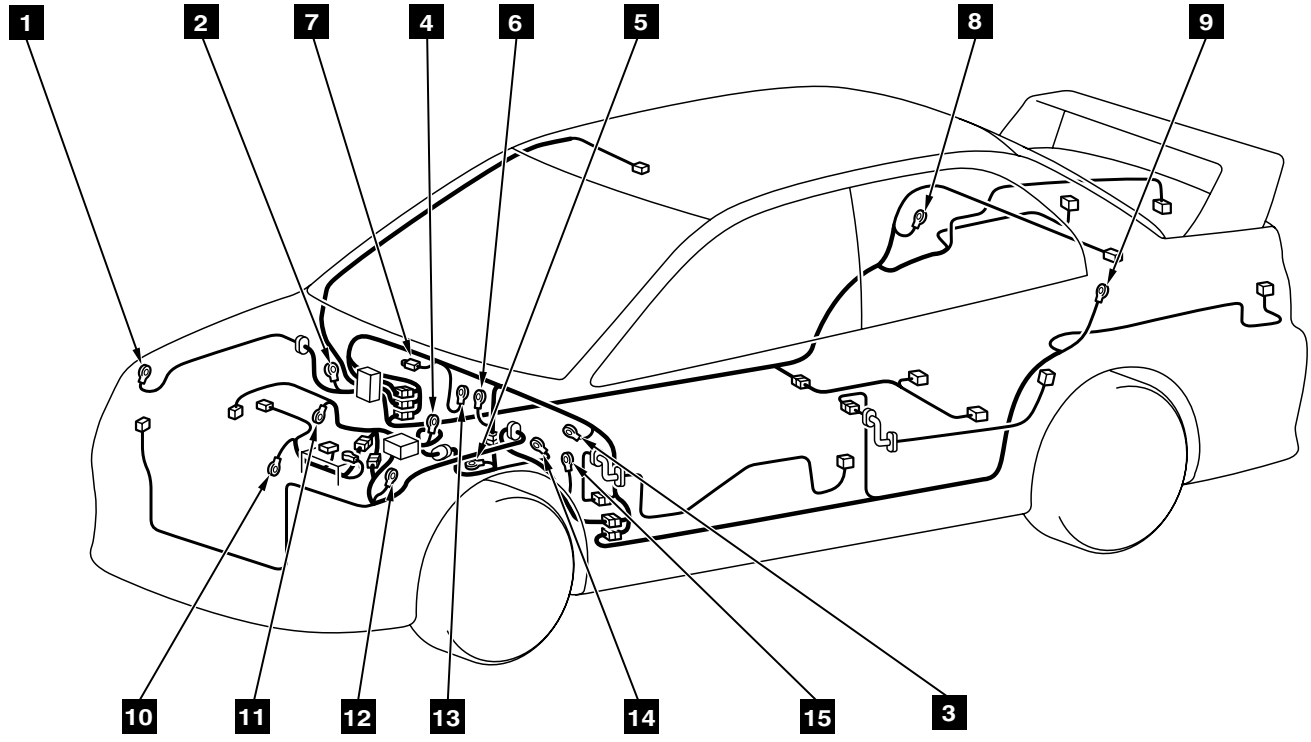

AC310179AB


NOTE: Same earth numbers are used in the circuit diagram.

1

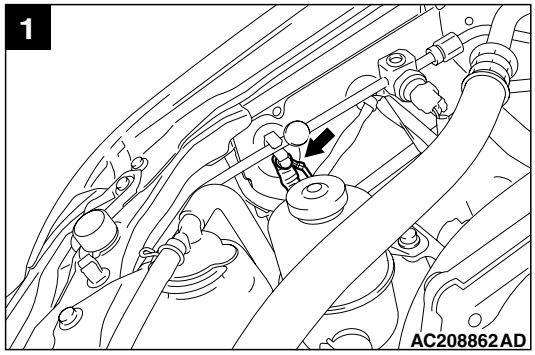


AC208862AD

2

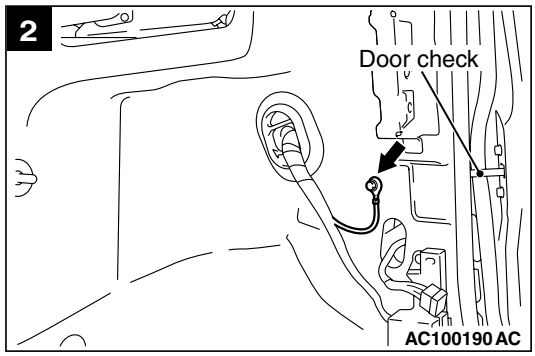


AC100190AC

3 <LHD>

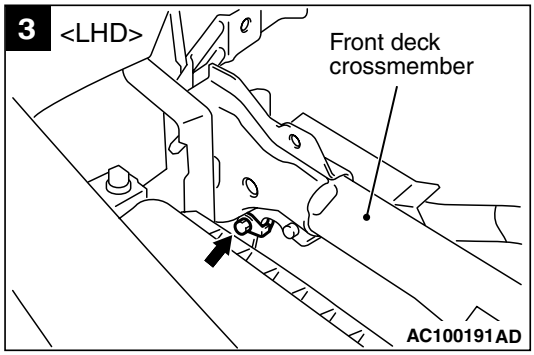


AC100191AD

3 <RHD>

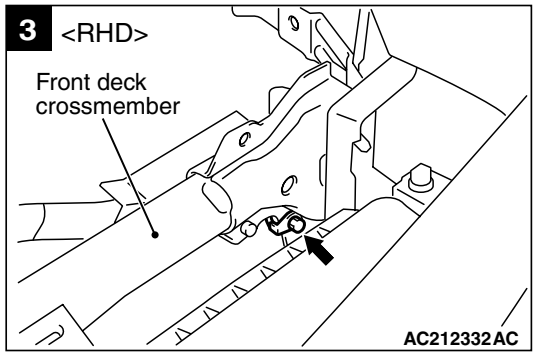


AC212332AC

4

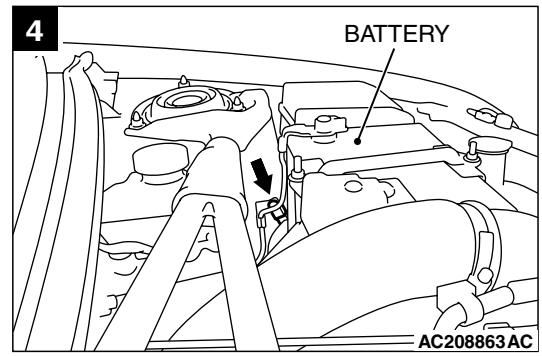


AC208863AC

5

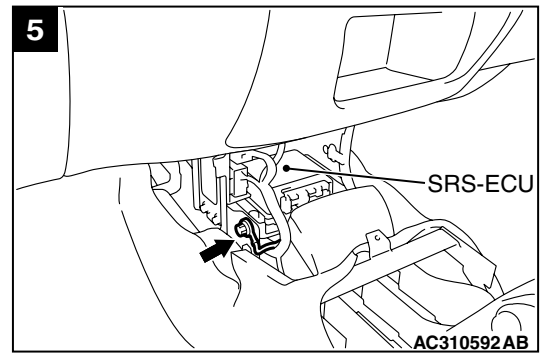


AC310592AB

6

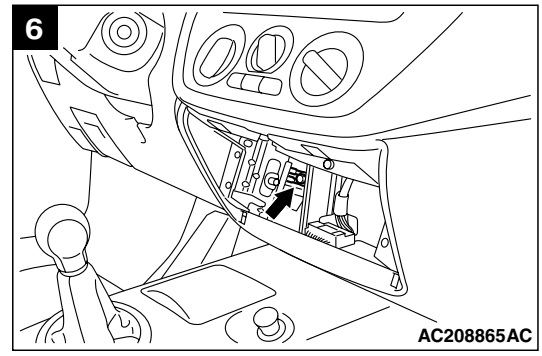


AC208865AC

7 <LHD>

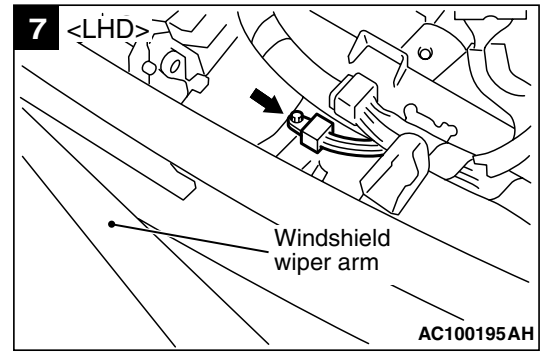


AC100195AH


7 <RHD>

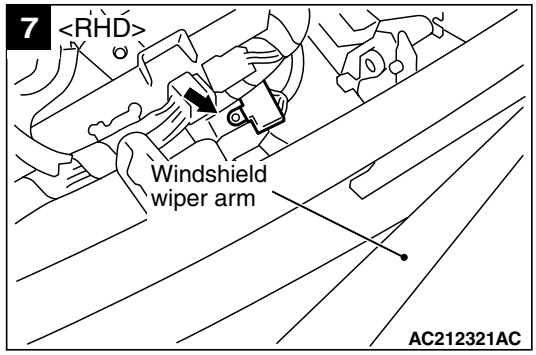


8

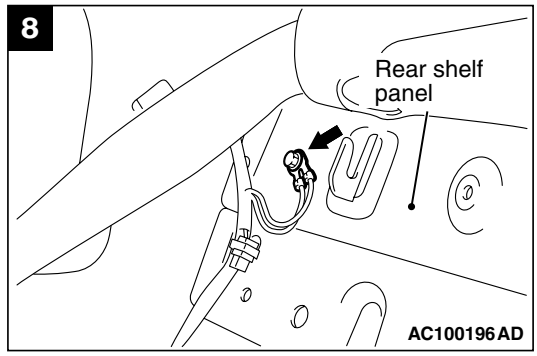


9

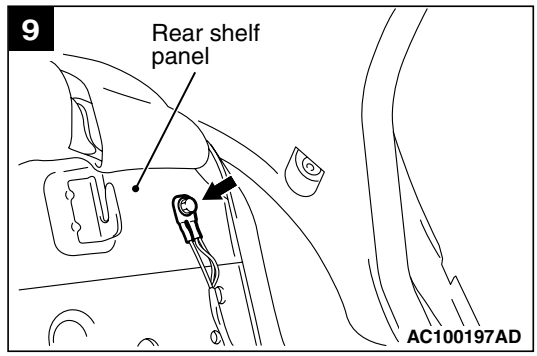


10

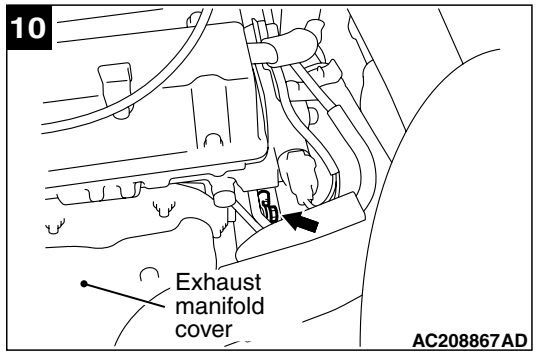


11

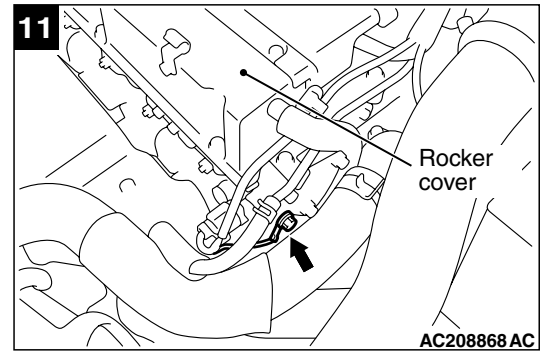


12

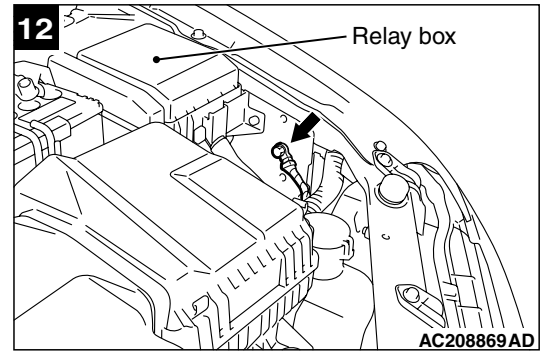

13

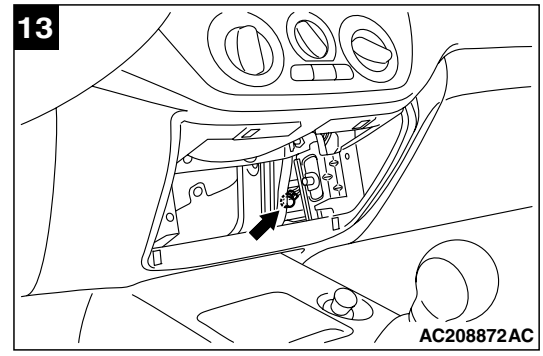

14

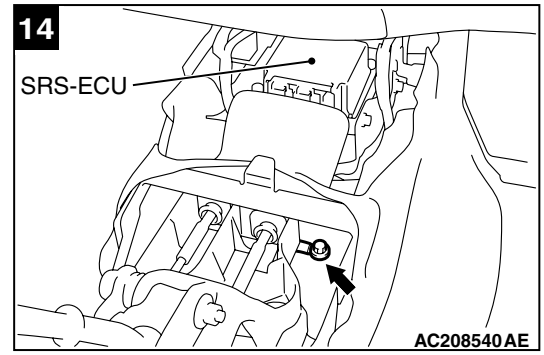

15

